

TurboTronic


Kitchen Electronics

INSTRUCTION MANUAL



Electric Blender Machine
TT-BG6

www.zline-world.com

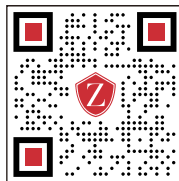

BEFORE CONNECTING TO POWER





- Before connecting to the power, please check whether the type of supply and the mains voltage match with the details given on the rating label on the appliance.
- Using for the first time: Rip off all wrapping paper and plastic bags. Clean the fittings. (Refer to Cleaning Method)

SAFETY GUIDANCE

- Special cares need to be paid when preparing food for a baby, an elderly or a patient. Before using the machine, you should be sure that the accessories have been completely sterilized and the sterilization has been under the disinfectant maker's instructions.
- Do not touch the blending blade when connecting to power.
- Keep your fingers, hair, clothes and other objects a distance from the machine when it is still rotating.
- Pull the plug off when changing fittings or after use.
- Do not mix hot oil or oily ingredient.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not dip the body into water or damp the cable, in case you will get an electronic shock. Children should be supervised to ensure that they do not play with the appliance.
- Do not put the cable on a hot surface or hang it from the


kitchen table. Your children can be hurt when they are trying to drag the cable and turn down the machine.

- If the supply cord is damaged, it must be replaced by the manufacture of its service agent or a similar qualified person in order to avoid a hazard.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Using the machine, do not operate the blender without food. Do not operate the machine over 20 seconds when the blender is unloaded.
- Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.

	Indicates to read and review instructions to understand operation and use of product.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	Take care to avoid contact with hot surface. Always use hand protection to avoid burns.
	For indoor and household use only.

KNOWING YOUR BLENDER

1. Lid
2. Measured cup
3. Jar
4. Motor unit
5. Speed button (Pulse,0,1,2,3,4)

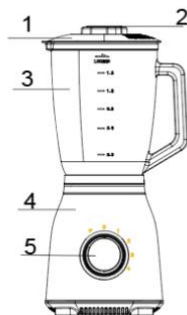

INSTRUCTIONS FOR BLENDER

- Insert the jar onto the motor unit as **step 1**. The Jar should be well placed down. If not, product will not work.
- Wash fruit / vegetables first and slice into small pieces – about 2x2cm.
- Place the sliced fruit / vegetables into Jar.
- Before blending, add desired level of water or liquid mixture into the jar. Pay attention that the mass food fills the jar not more than the highest line. You can see the highest standard line marked on the jar
- Fit the lid into the jar firmly as **step 2**
- Fit the measure cup into the lid firmly as **step 3**
- Plug the appliance in and then turn the speed button to 1 or 2 or 3 or 4 position. For Ice, suggest on Pulse speed.
- Each time cannot work more than 2 min. Cool down the appliance 20 min. before next operation in case motor over heat.
- After blending, please turn the speed button into 0 position. Wait for the motor unit stopping and then move the jar.



CLEANING

- Before cleaning remove the power cord from the socket.
- Never immerse the housing with motor in water!
- Do not use any sharp or abrasive detergents.
- Only a damp rinsing cloth should be used to clean the outside of the housing.
- Components that have come into contact with food can be cleaned in soapy water.
- Allow the parts to dry thoroughly before reassembling the device.

DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

LIMITED WARRANTY

Limited Warranty applies to purchases made from authorized retailers of **TurboTronic®**.

TurboTronic® Warranty coverage applies to the original owner and to the original product only and is not transferable.

TurboTronic® warrants that the unit shall be free from defects in material and workmanship. Limited Warranty apply only when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

ANY WARRANTY OR AFTER PURCHASE SERVICE, SHOULD BE WITH A THIRD-PARTY COMPANY, FROM WHICH YOU PURCHASED THE PRODUCT. TURBOTRONIC® PROVIDES THE WARRANTY ONLY TO OUR THIRD-PARTY SUPPLIERS. SINCE THIS PRODUCT IS NOT PURCHASED DIRECTLY FROM TURBOTRONIC® BUT THROUGH ONE OF OUR THIRD-PARTY SUPPLIERS, ANY ISSUE AFTER THE PURCHASE, CUSTOMER SERVICE OR RECEIVING THE WARRANTY SHOULD BE ONLY / DIRECTLY THROUGH THE THIRD-PARTY SUPPLIERS FROM WHICH YOU PURCHASED THE PRODUCT.

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in **TurboTronic®** sole discretion, will be repaired or replaced
2. **TurboTronic®** reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as blending vessels, lids, cups, blades, blender bases, removable pots, racks, pans, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty.
2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by **TurboTronic®**.

These defects include damages caused in the process of shipping, altering, or repairing the **TurboTronic®** product (or any of its parts) when the repair is performed by a repair person not authorized by **TurboTronic®**.

6. Products purchased, used, or operated outside Europe.

Illustrations may differ from actual product.

We are constantly striving to improve our products, therefore

the specifications contained herein are subject to change without notice.

TurboTronic® and **Z-Line®** are registered trademarks of **Z-GLOBAL B.V.B.A®**.

PRINTED IN PRC