

# TurboTronic

House Electronics



## **Bagless Convertible Stick Vacuum Manual**

TT-VS9

**[www.zline-world.com](http://www.zline-world.com)**

## IMPORTANT SAFETY INSTRUCTIONS

When using your BAGLESS CONVERTIBLE STICK VACUUM basic safety precautions should always be observed, including the following:

Read all instructions before using your BAGLESS CONVERTIBLE STICK VACUUM

**WARNING** - To reduce the risk of fire, electric shock, or injury:

1. Use the system only for its intended use.
2. To protect against a risk of electric shock, do not immerse any part of the system in water or other liquids.
3. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
4. Do not allow cord to touch hot surfaces.
5. Do not run appliance over cord.
6. Do not operate the system with a damaged cord or plug, or if the appliance or any other part of the system has been dropped or damaged. To avoid the risk of electric shock, do not disassemble or attempt to repair the BAGLESS CONVERTIBLE STICK VACUUM. Return the unit for examination and repair. Incorrect re-assembly or repair can cause a risk of electrical shock or injury to persons when the BAGLESS CONVERTIBLE STICK VACUUM is used.
7. Close supervision is necessary for any appliance being used by or near children. Do not leave the system unattended while connected.
8. Keep hair, loose clothing, fingers and all parts of body away from opening and moving parts.
9. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
10. Do not pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.
11. Use extra care when cleaning on stairs.
12. Do not use the vacuum without the dust cup filter in place.
13. This appliance is intended only for household use. Follow all user instructions in this manual.
14. Do not leave the BAGLESS CONVERTIBLE STICK VACUUM plugged in when un-attended. Unplug the electrical cord when not in use and before servicing.
15. Do not allow to be used as a toy. Close attention is necessary when used by or near children, pets or plants.
16. Use only as described in this manual. Use only manufacturer's recommended accessories.
17. Do not pull cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
18. Turn off all controls as applicable before unplugging from electrical outlet.
19. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
20. Do not handle plug or vacuum with wet hands or operate without shoes.
21. Do not put any objects into openings. Do not use with any opening blocked. Keep free of dust, lint, hair and anything else that may reduce air flow.
22. Store your appliance indoors in a cool, dry area.
23. Keep your work area well lit.
24. Do not immerse the vacuum into water or other liquids.
25. Keep end of hose, wands and other openings away from your face and body.
26. Use only on dry surfaces.
27. Using improper voltage may result in damage to the motor and possible injury to the user. Correct voltage is listed on rating label.
28. This appliance is provided with double insulation. Use only identical replacement parts. See instructions for Servicing of Double-Insulated Appliances.

For Household Use Only  
SAVE THESE INSTRUCTIONS

**WARNING:**

- To reduce the risk of injury from moving parts – Unplug before servicing.
- To reduce the risk of injury of electric shock – Unplug before cleaning or servicing.
- To reduce the risk of electric shock – Do not use outdoors or on wet surfaces.

## GETTING TO KNOW YOUR BAGLESS CONVERTIBLE STICK VACUUM



1. Extension Tube Handle
2. Extension Tube
3. Hand Vac Handle
4. On/Off Power Switch
5. Dust Cup Container Release
6. Dust Cup Container
7. Floor Brush
8. handle release button

**Note:** Illustrations may differ from actual product.

 
## Precautionary Measures

Important: If the suction opening in the unit or the hose is blocked, switch off the vacuum cleaner and remove the blocking substance before you start the unit again.


1. Do not operate the vacuum cleaner too close to heaters, radiators or cigarette butts.



2. Before inserting the power plug into the wall outlet, make sure that your hands are dry.

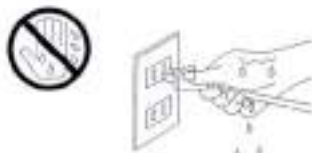

 3. Before you start vacuuming, make sure to remove large or sharp objects that might damage the dust cup filter.
4. When pulling out the power plug from the wall outlet, pull the plug not the power cord.

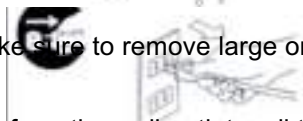

5. Do not pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.
6. Do not use without dust cup filter in place

## Operating Instructions

**Note:** Always remove the power plug from the wall outlet before assembling or removing accessories.

### Inserting the Metal Handle Into the Main Body

- On the hand vac handle, pull open the handle port and insert the extension tube until the locking clip is sitting firmly on the handle.
- Push the handle port closed so that it snaps shut.

### Attaching the Crevice Tool and the Floor Brush to the Main Body

- Push the crevice tool or floor brush into the suction hole opening.
- The following are recommendations for accessory usage:

### ***Crevice Tool***

For radiators, crevices, corners, base-boards and between cushions.

### ***Floor Brush***

 
For all kinds of flooring, including carpeted and tiled floors.

## **Operating Instructions**

**Caution:** The suction hole opening must be open and free of any obstructions at all times. Otherwise, the motor will overheat and could become damaged.

### **Power switch**

- push on the power switch to turn on the unit.
- push on the power switch again to turn off the unit.

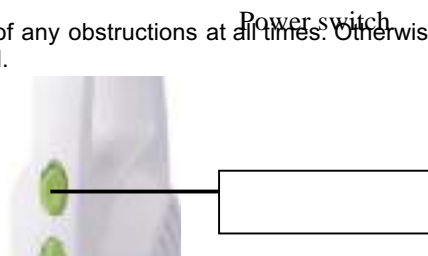

### **Using the Unit as an Upright**

- Insert the extension tube into the hand vac.
- Choose the appropriate accessory (crevice tool or floor brush) and attach it to suction hole opening on the hand vac

**Note:** You may choose not to attach the crevice tool or floor brush when operating as an upright.

- Press on the power switch turn the unit on. When finished using the unit, press on the power switch again to turn the unit off.
- When finished using the unit, wind the power cord around the cord winding hooks for easy storage.

### **Using the Unit as a Hand Vacuum**

- Disconnect the extension tube from the hand vac by handle release button and removing the extension tube from the hand vac handle. Once the extension tube is removed, snap the handle port shut.

**Note:** You may choose to leave the crevice tool or floor brush attached to the hand vac when operating as such.

- Press the “1” position on the On/Off power switch to turn the unit on. When finished using the unit, press the “0” position on the On/Off power switch to turn the unit off.

## **Cleaning & Changing the Dust Cup Filter**

### **Changing and Cleaning the Dust Cup Filter**

**In order to achieve the best performance, empty the dust cup container and clean the dust cup filter after each use.**

1. To remove the dust cup container, press down on the dust cup container release button (Fig. 8) and separate the dust cup container from the main unit.
2. Pull out the dust cup filter.
3. Empty the dust from the dust cup container.
4. Rinse the dust cup filter in cold water, and then let it air dry for **24 hours** before replacing it back in the dust cup container.

**Important Note:** DO NOT use a washing machine to clean the dust cup filter. Do not use a hair dryer to dry it. **AIR DRY ONLY.**

5. Replace the dust cup filter carefully into the dust cup compartment. **NEVER operate the stick vac without the dust cup filter in place.**
6. Attach the dust cup container to the main body of the unit.

**Note:** It is recommended that the dust cup filter be replaced every three (3) months (depending on usage) to ensure peak performance of the unit.

## Ordering Replacement Dust Cup Filters

### **Please Note:**

The Dust Cup Filter is washable. It should, however, be replaced every three (3) months (depending on usage) to ensure peak performance of your vacuum.

### **Important:**

Make sure that **ALL** filters are completely dry before re-installing back in the vacuum.

### **WARNING:**

#### Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.