 **TurboTronic**[®]
House Electronics

AQUAVAC
Professional Spot Vacuum Cleaner


INSTRUCTION MANUAL



SPOT VACUUM CLEANER
TT-AQV600

Scan for more product info



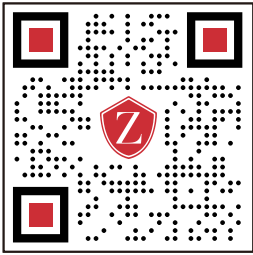













Thank you for buying **AquaVac** - Portable Spot and Stain Carpet Cleaner by **TurboTronic®**.

AquaVac spot cleaner effectively removes spills and stains, by combining powerful suction and deep hygienic cleaning tools, with a specifically formulated cleaning solution designed to target everyday stains.

SPECIFICATION

Product	SPOT VACUUM CLEANER
MODEL	TT-AQV600
AC INPUT VOLTAGE	220~240~
FREQUENCY	50-60 Hz
RATED POWER	400W;
CWT CAPACITY	1.6L
DWT CAPACITY	0.48L
WATERPROOF	IPX4
MASS	Approx.:3.7Kg

SYMB	ATTENTION
	Caution.
	Read operators manual.
	Risk of fire.
	Risk of electric shock
	Do not expose to rain.
	Store indoors.
	EN Do not overwet carpet. Use only on carpet moistened by the cleaning process.
	Disconnect power before servicing.
	Do not freeze.
	Protection against moving parts.
	If use warm water, temperature up to 30 ° C.
	This symbol on the product and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points. Please contact your local authority for further details of your nearest designated collection point.

IMPORTANT SAFETY INSTRUCTIONS

Please read all safety instructions before using this device.

When using electrical equipment, basic precautions should be followed, including:



WARNING

To reduce the risk of fire, electric shock or injury, please operate in accordance with the following requirements:

- This device can be used by children beyond 8 years old, and with physical, sensory, mental impairments or inexperienced and uneducated persons, provided they are supervised or informed of the safe use of the device and the associated hazards. Children should not be allowed to perform unsupervised cleaning and user maintenance operations.
- Children should be supervised to ensure that they do not play with this device.
- Unplug the unit from the electrical outlet when not in use and before cleaning, maintaining, or servicing the unit, or if your unit is equipped with an auxiliary tool with movable brushes, unplug the tool before connecting or disconnecting it.
- Do not immerse in water or liquid.
- Ensure hair, loose clothing, fingers and body parts are kept away from the openings and moving parts of the device and its accessories.
- If the power cord is damaged, it must be replaced by the manufacturer, the manufacturer's agent, or a similarly qualified person to avoid danger.
- Do not allow this device to press through the cable.
- Do not use damaged cables or plugs.
- Never pull on or lift equipment through cables, never use cables as handles, never pinch cables when closing doors, and never pull cables on sharp edges or corners.
- Ensure the cables are kept away from heated surfaces.
- Do not leave the unit unattended while plugged in.
- Be sure to connect to a properly grounded electrical outlet. Do not modify the grounded plug.
- Before unplugging, please pinch the plug instead of the cable.
- Do not hold the plug or the unit with wet hands.
- Turn off all controls before disconnecting the plug.
- Plastic wrap can cause hazards. Children should be kept away from plastic wrap to avoid choking.
- Be sure to use the device as specified in this instruction manual.
- If the unit does not work properly, has been dropped on the ground, damaged, placed outdoors, or has been dropped in water, do not attempt to operate it but take it to an authorized service center for repair.
- Do not put any object into the opening position.
- Do not use it with clogged openings; Make sure there is no dust, lint, hair or anything that could reduce airflow.
- Extra care should be taken when cleaning the stairs.
- Do not sweep flammable or combustible liquids (such as gasoline) or use this device in areas where flammable or combustible liquids may be present.
- Do not use to sweep up toxic substances (chlorine bleach, ammonia, drain cleaners, etc.).
- Do not use this device in a confined space filled with vapors from oil-based paints, paint thinners or certain moth-proof substances, combustible dusts or other explosive or toxic vapors.
- Do not use for sweeping hard or sharp objects, such as glass, nails, screws, coins, etc.
- Do not use to sweep up burning or smoking objects such as cigarettes, matches or hot ashes.
- Do not expose to rain. Please store indoors.
- After each use, the water must be poured. The inside and outside of the machine must be wiped clean.
- Damaged parts should be reported for repair in time. Check whether the power plug is filled with water, turn the switch on and then operate it off.

PLEASE KEEP THESE SAFETY INSTRUCTIONS FOR FUTURE REFERENCE ORIGINAL INSTRUCTIONS




It is suitable for operation on 220-240V 50-60 Hz AC power.


This model is for home-use only.

IMPORTANT INFORMATION


- Make sure to place the unit on a level surface.
- Do not store in areas where icing may occur.

SPRAY, SCRUB, AND LIFT
with powerful suction

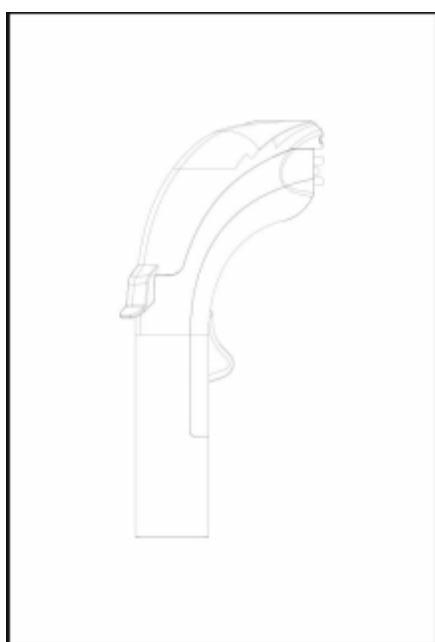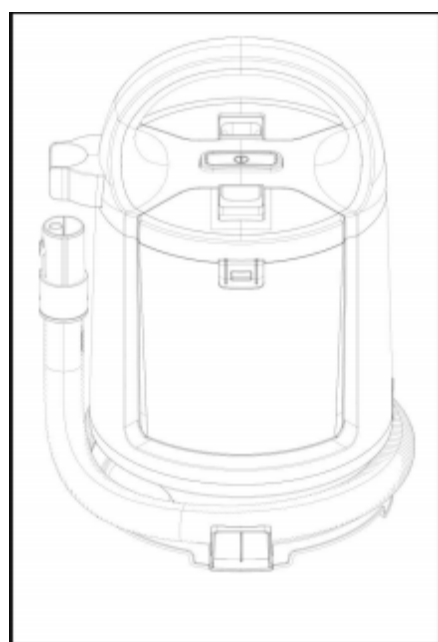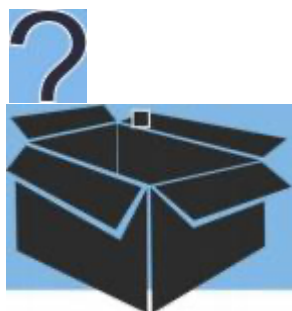


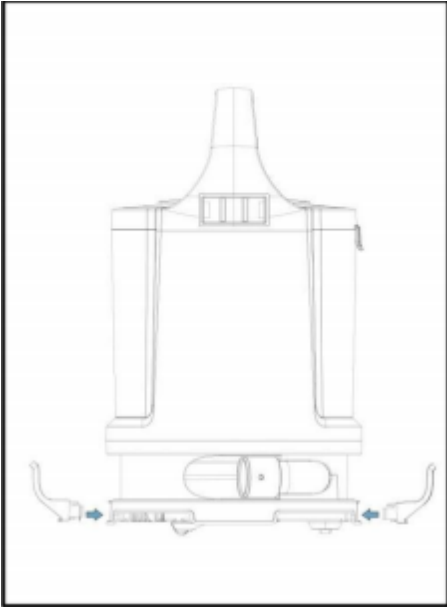


Accessories storage rack:
storage hose and power cord.

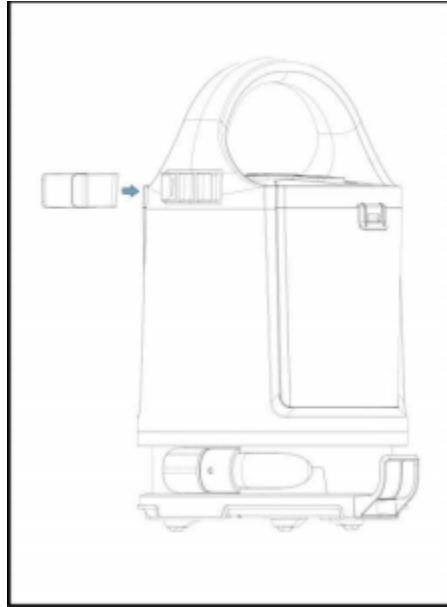


Handle brush placement.

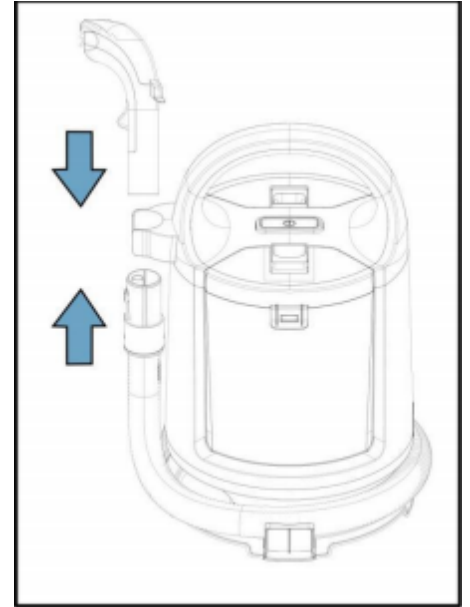


Connect the handle brush with
hose and put in the handle
brush placement.

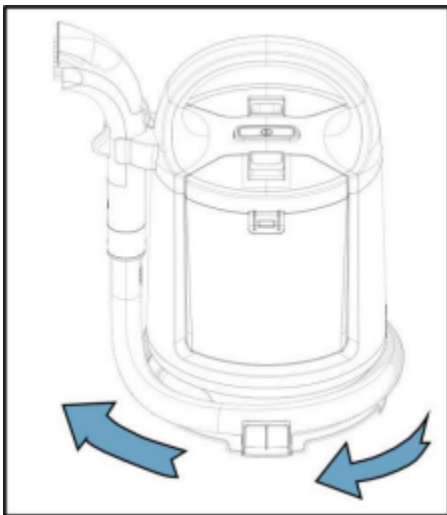


Remove the handle brush and
hose, prepare to use.

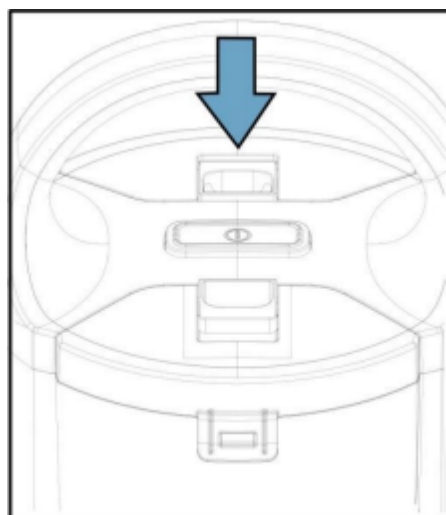


Push the clean water tank
switch outward to move the
clean water tank.

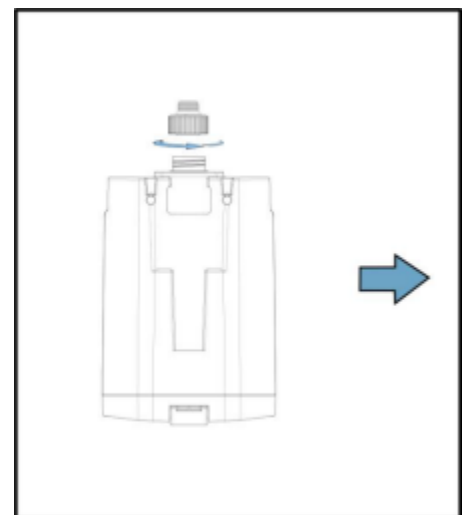


Unscrew the cap, twist right to
OPEN and take off the water
tank lid.

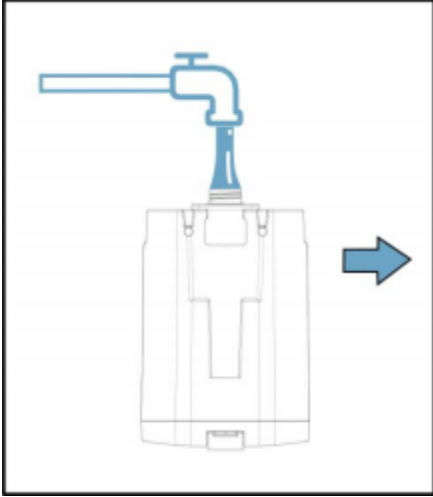


Fill the tank with the clean water and twist the tank lid.

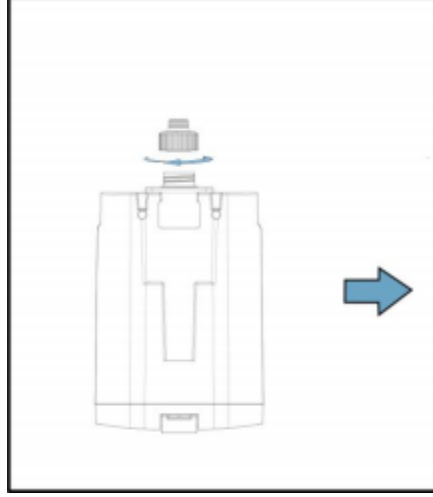


Screw the cap, Twist left to CLOSE the water tank lid.

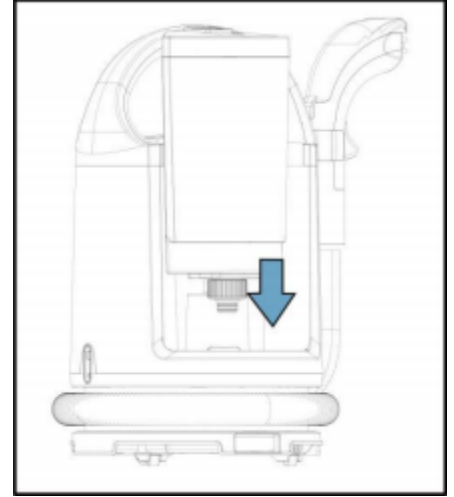


Assemble the clean water tank.

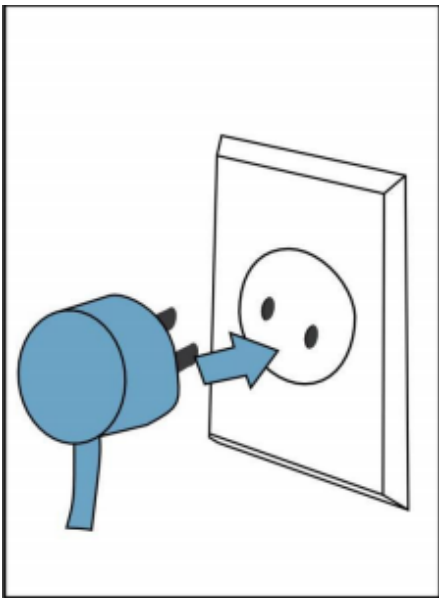


Plug on.

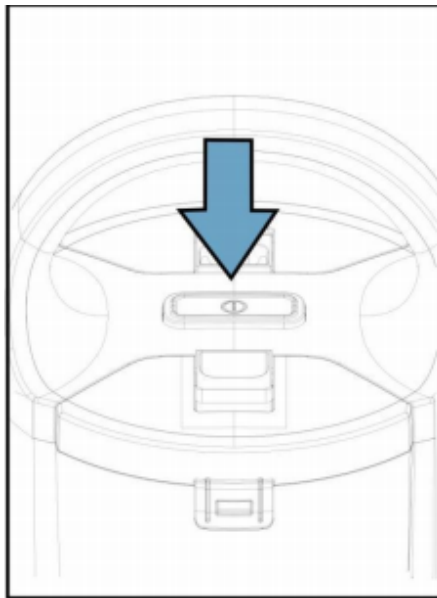


Push the button to switch ON.

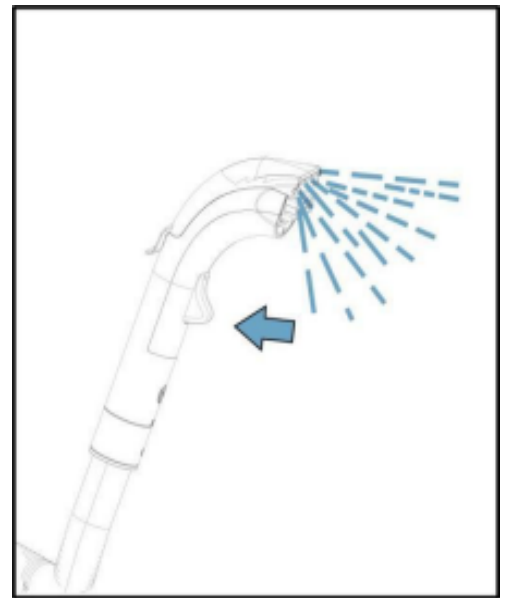


Squeeze water under the pressing of handle switch.

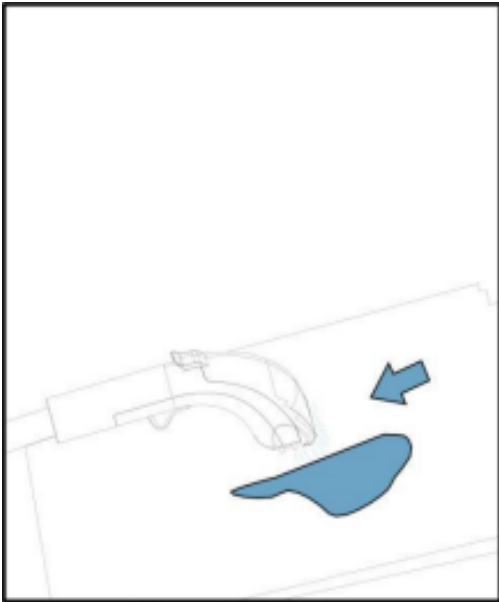


Using the spot cleaner to clean the sofa, carpet.

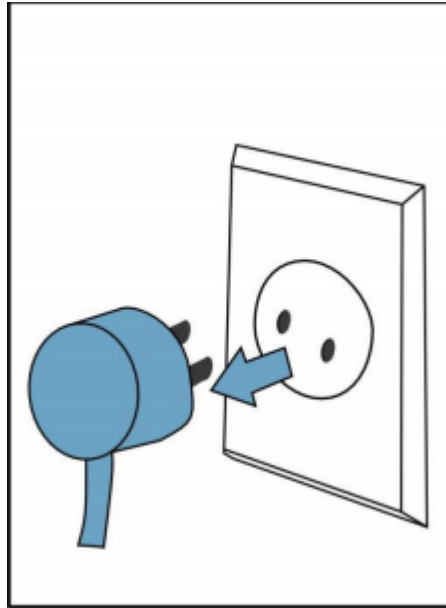


Power off.

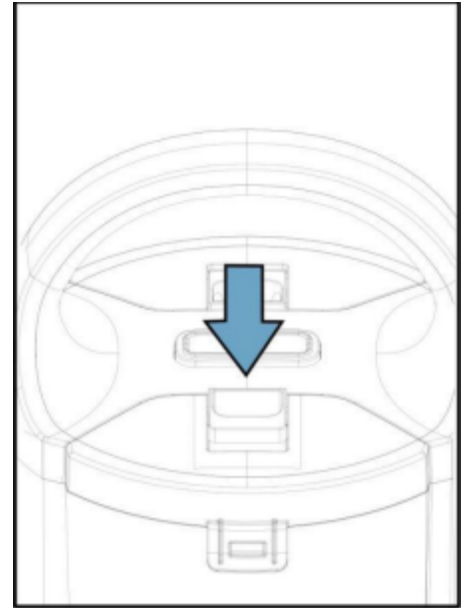


Push the clean water tank switch outward to move the clean water tank.

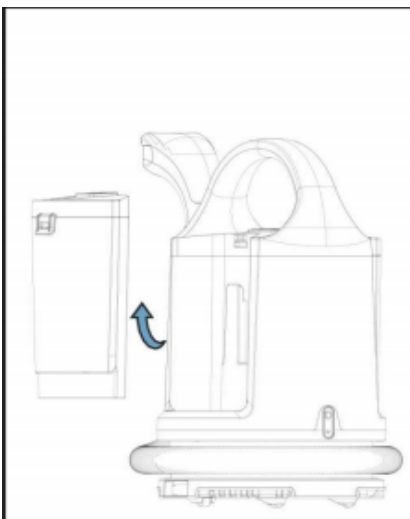



Take off the dust water tank.

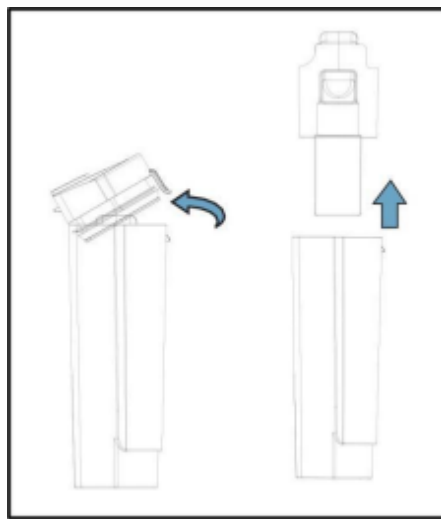


Lift the lid to remove from the dirty water tank.

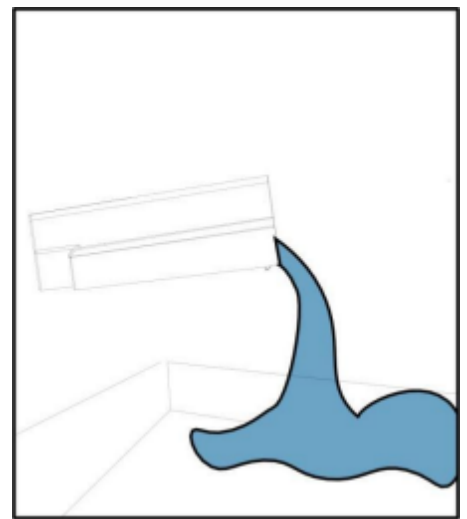

Empty the dirty water into the sink or toilet.

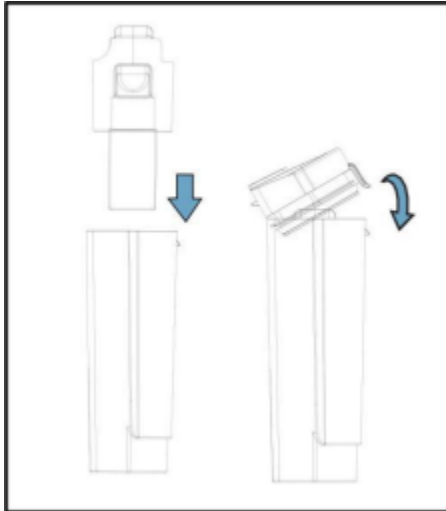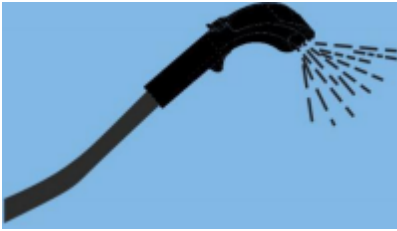

Clean and rinse the dirty water tank and lid under water to remove dirt/debris. Place back the lid to close the tank.

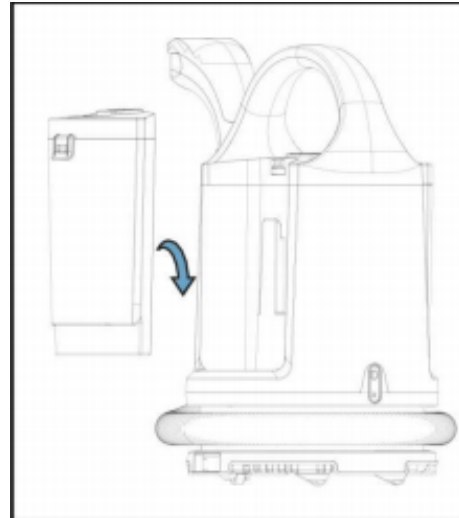

Refit the water tank onto the machine so it clicks into place.

DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

LIMITED WARRANTY

Limited Warranty applies to purchases made from authorized retailers of **TurboTronic®**.

TurboTronic® Warranty coverage applies to the original owner and to the original product only and is not transferable.

TurboTronic® warrants that the unit shall be free from defects in material and workmanship. Limited Warranty apply only when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

ANY WARRANTY OR AFTER PURCHASE SERVICE, SHOULD BE WITH A THIRD-PARTY COMPANY, FROM WHICH YOU PURCHASED THE PRODUCT. TURBOTRONIC® PROVIDES THE WARRANTY ONLY TO OUR THIRD-PARTY SUPPLIERS. SINCE THIS PRODUCT IS NOT PURCHASED DIRECTLY FROM TURBOTRONIC® BUT THROUGH ONE OF OUR THIRD-PARTY SUPPLIERS, ANY ISSUE AFTER THE PURCHASE, CUSTOMER SERVICE OR RECEIVING THE WARRANTY SHOULD BE ONLY / DIRECTLY THROUGH THE THIRD-PARTY SUPPLIERS FROM WHICH YOU PURCHASED THE PRODUCT.

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in **TurboTronic®** sole discretion, will be repaired or replaced
2. **TurboTronic®** reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as blending vessels, lids, cups, blades, blender bases, removable pots, racks, pans, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty.
2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by **TurboTronic®**. These defects include damages caused in the process of shipping, altering, or repairing the **TurboTronic®** product (or any of its parts) when the repair is performed by a repair person not authorized by **TurboTronic®**.
6. Products purchased, used, or operated outside Europe.

Illustrations may differ from actual product.

We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

TurboTronic® and **Z-Line®** are registered trademarks of **Z-GLOBAL B.V.B.A®**.

PRINTED IN PRC