 **TurboTronic**®  
Kitchen Electronics

# Samurai

PROFESSIONAL DIGITAL BLENDER

## INSTRUCTION MANUAL



DIGITAL COUNTERTOP BLENDER

**TT-BG7**





Thank you for buying the **Samurai** - Digital Blender by **TurboTronic®**. TT-BG7 professional blender features a sleek design and outstanding performance with LM 2100W of professional power. 6 Stainless steel crushing blades gives you perfect ice crushing, blending, pureeing, and controlled processing. The XL 2 Liter Professional blender glass jar is great for making drinks and smoothies for the whole family.

<b>ITEM NUMBER:</b>	<b>TT-BG7</b>	<b>BRAND</b>	<b>TURBOTRONIC</b>
<b>DESCRIPTION:</b>	Digital Countertop Blender	<b>VOLTAGE</b>	220-240V, 50/60Hz
		<b>POWER</b>	1500W 2100W Locked motor
<b>PRODUCT SIZE:</b>	210*180*440mm	<b>QTY.:</b>	1 PCS/CTN
<b>JAR CAPACITY:</b>	2.0 L Capacity	<b>RPM (+/-15%)</b>	25000
<b>GB SIZE</b>	364*220*310mm	<b>COLOR:</b>	Black & Stainless steel
<b>MC SIZE:</b>	380*235*325mm	<b>EAN:</b>	4260563037462



IMPORTANT NOTICES!

PLEASE KEEP FOR REFERENCE!

## ■ **SAFETY INSTRUCTIONS**

Read all operating instructions carefully before using the appliance and retain them for future reference.

- This appliance is designed for household use only.
- Always operate the product on a dry, level, and vibration-resistant surface.
- Never immerse the product in water or any other liquid.
- Do not operate with wet hands or if the appliance is damp.
- If the product becomes wet, unplug it immediately and dry thoroughly before use.
- Avoid contact with sharp edges when handling the product.
- Do not allow children or untrained persons to use this blender without proper supervision. This appliance is not suitable for individuals (including children) with physical, sensory, or mental limitations, or lack of experience, unless they are supervised by a responsible person who has instructed them on safe operation.
- Children should be supervised to ensure they do not play with the appliance
- Always unplug the product:
  - When left unattended
  - Before assembling or disassembling parts
  - Before cleaning






- Use only original spare parts.
- If the power cord is damaged, it must be replaced by the manufacturer or an authorized service agent to prevent potential hazards.
- Never tamper with, override, or disable safety switches - these critical components are designed for your protection.
- Never insert hands, fingers, or any objects into the appliance while powered on.
- Do not interfere with any safety switches.
- Keep all body parts (especially fingers) clear of:
  - Moving components during operation
  - Blades and attachments
  - Hinge mechanisms at all times
- Always ensure all moving parts have completely stopped before removing any accessory
- Do not fill beyond the maximum capacity mark on any accessory.
- Blades are extremely sharp - Handle with extreme care during: Installation/Removal/Cleaning/Storage.
- Extreme Caution Required when processing hot liquids:
  - Always allow very hot liquids to cool slightly before blending
  - Never fill past the 1/4 MAX capacity
  - Start at lowest speed and gradually increase
  - Keep face and body away from lid during operation
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.


## ■ **BEFORE CONNECTING TO POWER**

Before plugging in:

- Verify power supply type and voltage match the rating label;
- Confirm all packaging materials are removed;
- Ensure all parts are clean and dry.

## ■ DIGITAL DISPLAY ON CONTROL DIAL

	<p>Dial at OFF position. Ready for usage or reset blender.</p> <p>If blender is in no usage more than 5 min., all the icons will be off. It is for saving energy. Rotate the dial, the icons are showing again and the product is ready for usage.</p>
	<p>Lid opened or jar not placed well, check the lid /jar and set it properly</p>
	<p>Dial is not in the correct start position. Need to rotate the Dial at OFF position to reset blender.</p> 
	<p>For "Preset" mode: Rotate the dial counterclockwise from the OFF position, the displayer will show "P", the product is ready for "preset" modes.</p>

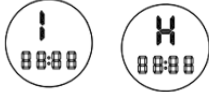	<p>For “Speed” setting, Rotate the dial clockwise from the OFF position, the product will work from speed 1 to speed H.</p>
---	---

## ■ **SPEEDS FOR USE**

This blender has “OFF”, “Mode”, “Speed” SWITCH controls.

### ● **“OFF” SWITCH CONTROLS**



Rotate the Dial mark to match the housing mark, as “OFF” position.




The displayer will show “Zero”, blender will stop working or reset.

### **IMPORTANT:**

To avoid any accident that when jar placed into housing and blender works at once, this product is designed to be only work when the Dial is started from “OFF” position.

If not, a “zero icon” will be in displayer by flashing light.

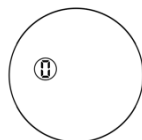

### ● **“Mode” SWITCH CONTROLS**



- Turn the Dial to left side from “Off”, displayer will show “P” and “time” information.
- 3 preset program mode buttons under the Dial will be illuminated. Press one of them, others button light will be off.
- Press the same button again, this button function will be cancelled and all 3 buttons will be illuminated again.
- “Time” is preset and cannot be changed. Its time will count backwards for **Crushing** and **Smoothie** mode, for **Pulse** mode, it only shows the running time.

- **“Pulse” Mode – Pulse function**

Press and hold the button for blending, release to stop.

- **“Crusher” Mode – Crusher function**

Blender under this mode will **automatically** work: few seconds on and stop, and repeat the process several times.

- **“Smoothies blending” Mode –Smoothies function**

Blender under this mode will **automatically** work: speed will increase till to max speed, working 2 minutes will stop by itself.

- **“10 Speeds” SWITCH CONTROLS**



Turn the Dial to clockwise direction from “OFF” position, display will show the setting “speed” and “time” information.

“Speed” will be showing from 1,2,3,4,5,6,7,8,9,H.


- The Slowest speed, turn the control Dial to “1”.
- The Max speed, turn the control Dial till to “H”.

“Time” cannot be preset, it is only showing the running time.

## ■ **INSTRUCTIONS FOR USE**

### **Step 1 (as Picture A):**


- Insert the jar into the motor unit, ensure the safety lock outlet of jar is well inserted into body hole.

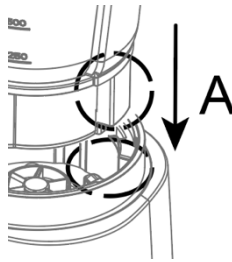


### **Step 2:**

- Wash fruit / vegetables and cut into small pieces – about 2x2cm.
- Place the fruit / vegetables into jar and add desired level of water or liquid mixture into the Jar. Pay attention that food cannot more than the max. level line of the jar

### **Step 3 (as picture B):**

- Turn the lid clockwise to screw and lock into the jar.
- Pay attention that Safety lock pin of lid needs to insert into Safety lock hole of handle well. If not, the motor unit will not work, and in the meantime, a reminder icon  will be displayed

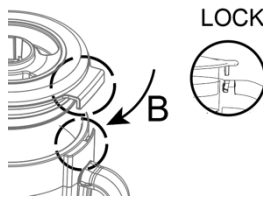

### **Step 4:**

- Fit the measured cup into the lid
- Plug in and choose the speed base on your food request.

**- for “Speed” SWITCH controls:**

After turning the dial clockwise to the desired speed position, the machine will operate automatically

**- for “Mode” SWITCH controls:**

Turn the dial counterclockwise until the display shows "P", and the three programs below the dial will be displayed.

Click on one of programs and the machine will start working with preset speeds and time.




- Run the blender within 2 min. and then rest at least 1 min. for 2<sup>nd</sup> operation. Do not use the blender for more than two operations. Allow blender to cool 30 min. before the 3<sup>rd</sup> time operation.
- Never open the lid when the blade is still rotating. For extra caution, you can wait the item completely stopped and unplug the appliance before removing the lid.
- To add liquid ingredients during processing, remove the measuring cup of the lid and pour liquid through the opening in the lid.
- If the result is not satisfactory, switch the appliance off and stir the ingredients with a spatula.

■ **CLEANING**

- Before cleaning, please remove the power cord from the socket.
- Do not immerse the housing with motor in water.
- Do not use any abrasive detergents.
- Please only use a damp to clean the outside of the housing.
- Components that have come into contact with food can be cleaned in soapy water.
- Allow the parts to dry thoroughly before reassembling the device.

■ **TROUBLESHOOTING**

PROBLEM	EASY SOLUTION
---------	---------------

Blender does not work	<p>This item has some system to protect you from injured case.</p> <p>* If a “cup icon”  in displayer, it means the blender is not ready. Need to recheck on:  -- the lid is locked well into jar or not.  -- the jar is placed well into housing or not.</p> <p>* If a “zero icon”  in displayer, it means the Dial is not in the correct start position. Need to rotate the Dial to “OFF” position firstly then next to select function.</p>  <p>* If the motor still not start, check the power cord and power outlet.</p>
Motor slows down when blending	* Amount of food may exceed maximum capacity. Remove half and process in two batches.
Motor is smelly	<p>* No smoke but just smelly in the first times usage, this is normal case since Motor is new.</p> <p>* Amount of food may exceed maximum capacity. Remove half and process in two batches.</p>
Vibrates/moves during processing	<p>* Clean and dry the rubber feet at the bottom of the unit.</p> <p>* Also make sure that the maximum load capacity is not being exceeded.</p>

## DISPOSAL OF OLD ELECTRICAL APPLIANCES:



The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE) mandates that old household electrical appliances should not be discarded with regular municipal

waste. They must be collected separately to enhance material recovery and recycling, thereby minimizing their impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product serves as a reminder that when disposing of the appliance, it must be handled separately.

Consumers are advised to contact their local authority or retailer for guidance on the proper disposal of their old appliances.

### **LIMITED WARRANTY:**

Limited Warranty applies to purchases made from **TurboTronic®**'s authorized retailers of **TurboTronic®** Warranty coverage applies to the original owner and to the original product only and is not transferable.

**TurboTronic®** warrants that the unit shall be free from defects in material and in workmanship. The Limited Warranty applies only when the unit is used under normal household conditions and maintained according to the requirements stated in the Instruction Manual, subject to the following conditions and exclusions:

**ANY WARRANTY OR AFTER PURCHASE SERVICE, SHALL BE WITH THE THIRD-PARTY COMPANY, FROM WHICH YOU PURCHASED THE PRODUCT. TURBOTRONIC® PROVIDES THE**

**WARRANTY ONLY TO OUR THIRD-PARTY SUPPLIERS. SINCE THIS PRODUCT WAS NOT PURCHASED DIRECTLY FROM TURBOTRONIC® BUT VIA ONE OF OUR THIRD-PARTY SUPPLIERS, ANY ISSUE AFTER THE PURCHASE, CUSTOMER SERVICE OR RECEIVING THE WARRANTY, SHOULD BE ONLY / DIRECTLY HANDLED VIA THE THIRD-PARTY SUPPLIER FROM WHICH YOU PURCHASED THE PRODUCT.**

**What is covered by this warranty?**

1. The original unit and/or non-wearing parts deemed defective will be repaired or replaced, at **TurboTronic®** sole discretion,
2. **TurboTronic®** reserves the right to replace the unit with one of equal or greater value.

**What is not covered by this warranty?**

1. Normal wear and tear of wearing parts (such as blending vessels, lids, cups, blades, blender bases, removable pots, racks, pans, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty.
2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by **TurboTronic®**. These defects include damage caused in the process of shipping, alteration, or repair of the **TurboTronic®** product (or any of its parts) when the repair is performed by a repair person not authorized by

**TurboTronic®.**

6. Products purchased, used, or operated outside Europe.

Illustrations may differ from actual product.

We constantly strive to improve our products, so the specifications contained herein are subject to change without notice.

**TurboTronic®**, **SportTronic®** and **Z-Line®**  
are registered trademarks of **Z-GLOBAL B.V.B.A®**.